

MANDO UNIVERSAL

TV LG



Remote control // Télécommande // Controle remoto // Controllo remoto // Fernbedienung

Pilas no incluídas // Batteries not included // Piles non incluses // Batterie non incluse // Batterien nicht im Lieferumfang enthalten

2 x AAA

Distancia de funcionamiento // Operating distance // Distance de fonctionnement // Distância de operação // Distanza operativa // Betriebsabstand **> 8m**

Voltaje // Voltage // Tension // Voltagem // Tensione // SpannungKabel **DC 3V**

MODELOS COMPATIBLES

6710900010A/E/F	MKJ32022838	6710V000079A
6710900010G/J/S	MKJ33981404	6710V00007A/B/C/D
6710900011W	MKJ33981406	6710V00007Q/N/M/K
6710T00008B/C/G	MKJ33981410	6710V00007H/W/V/T/S/Y
6710T00017M/Q/V	MKJ33981413	6710V000080C
6710T00017B/H	MKJ33981422	6710V000080A/B/N/V
6710T00019F	MKJ37815702	6710V00008C/K/T/W
6710T00022D/F/S	MKJ39170804	6710V000140F
6710V00091A/G/Z	MKJ39170805	6710V00017E/F/G/H/M
6710V00124V	MKJ39170806	6710V00018A
6710V00126L/Q	MKJ40653802	6710V00026C/A/D/H/J/S/X
6710V00126R/M	MKJ40653806	6710V00027F/J/K
6710V00138N/T/F	MKJ40653807	6710V00028G/H/R/S
6710V00138L/M	MKJ40653831	6710V00029E/B/D/F/H/K/L
6710V00141A/D/K	MKJ42519601	6710V00032U/J/G/C/W
6710V00151S	MKJ42519604	6710V00042E/A
AKB14972914204	MKJ42519605	6710V00054E
AKB33871407	MKJ49980313	6710V00056A/B/C/D/E
AKB33871409	MKJ61611303	6710V00061D/G/Z/T
AKB33871410	105-207J	6710V00070A/B
AKB69680403	105-209A/B/C/D/L/J/M	6710V00077S/N/Z
AKB69680404	105-210A/E/F/J/M	6710V00077T
AKB69680416	105-212D/N/P/Q/R/Z	6710V00078A/C/E/H
AKB72914009	105-214C/G/L/S/V/PF	6710V0007W
AKB72914020	105-219A/D/L	6710V00083Q/S
AKB72915207	105-224F/P	6710V00088A/B/S
AKB72915210	105-224G/F/P/Z	6710V00090A/B/D/F
AKB72915211	105-229Y/B/D	6710V00090L
AKB72976005	105-230A/C/D/F/G	6710V00090W
MKJ30036801	105-230H/J/K/M/Y	6710V00109B
MKJ32022805	6710900010S	
MKJ32022814	6710900011N	
MKJ32022826	6710900014A	
MKJ32022835	6710T00017J	

Embalaje // Packing // Emballage // Embalagem // Imballaggio // Verpackung **100**

